

# INSTRUCTIONS

## Washing machine ProLine HX/NX

### Wash



#### 1. Load

Load the washing machine.



#### 2. Close

Close the door. Turn the knob.



#### 3a. Add powder

If powder detergent is used, pour it into the II-compartment.



#### 3b. Add liquid

If liquid detergent is used, pour it into the III-compartment.




#### 4. Add softener

If softener is used, pour it into the \* -compartment.



#### 5. Choose program

Choose program with the arrows.

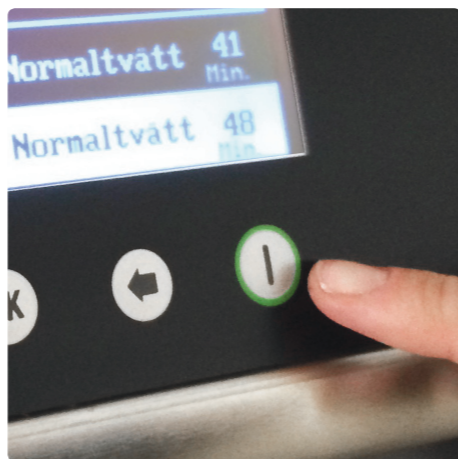

#### 6. Start

Press the start button. I



#### 7. Unload

When the wash cycle is finished, unload the laundry.

### Extra



#### Prewash

If prewash is selected, add detergent in the I-compartment.



#### Stop in advance

Press the I-button several times, to reach the end of the program.