


Instructions

Tumble dryer ProLine T 9-16 VP

1. Fill the machine

Fill the drum with laundry and close the door firmly.

2. Select program

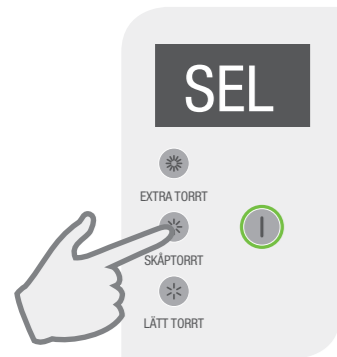

The display shows SEL (Select). Select the temperature by pressing the buttons. 1, 2 or 3 is shown in the display.

3. Start

Press the start button

4. Time

The dryer is set on 35 min. If more time is needed, press on the chosen program and the dot on the display will stop flashing. For each press on the chosen program, the time is increased.

5. Cancel or fast forward program

To fast forward/stop program press

6. Program ends automatically

When the time has elapsed, the dryer stops by itself.

7. Clean lint filter

Note! The tumble dryer is equipped with a double lint filter. It is important that both filters are cleaned after each drying.

Button	No	Programs
	1	70 °C
	2	55 °C
	3	40 °C



Note! The tumble dryer is equipped with a double lint filter. It is important that both filters are cleaned after each drying.

Release the front filter. Clean the rear filter and the space between the filters. Put the filter back and close the door.

Open the door to access the filters.

