# Instructions

## Washing machine BaseLine TM 8055/TM 8060

# 1. Start the display




Press the On/Off button to start the display.

### 2. Fill the machine



Press the key symbol to open the door.


# 3. Select program and program options (see program table for more info)

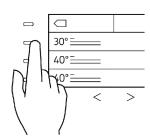

Use to see more programs. Select program and the desired program options by pressing the light bar next to the program name.

Press on to change or cancel a selected program.

## 4. Detergent drawer

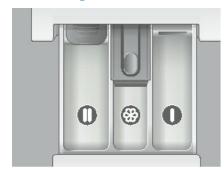

- Detergent for main wash
- Fabric softener
- Detergent for prewash

## 5. Start



Close the door. Press the start button.

#### Cancel

Press the light bar next to 'Cancel' and **hold** until 'End' is i displayed.

#### **Programs**

30° Cotton	Normally stained textiles such as pants and shirts
------------	--

40° Cotton Normally stained textiles such as pants, shirts and socks

60° Cotton

Bed linens, towels, shirts and underwear

30° Easy care

Outerwear, T-shirts, shirts, shouses, socks

Outerwear, T-shirts, shirts, blouses, socks

60° Easy care Outerwear, shirts, blouses, aprons

20° Hand wash Textiles made from hand-washable wool or wool blend

30° Wool Machine washable fabrics made of or containing wool

30° Silk Handwashables without wool, use washing net for bras etc.

30° Sportswear

Textiles with microfibers such as sports and leisurewear

40° Impregnating

For impregnation of textiles with microfibers, e.g. sportswear

90° Cotton White cotton textiles such as bed linens and towels

Spin Spin only

70° Autoclean Cleans the drum and washing liquor tanks (without laundry)

60° ECO Cotton For lightly stained cotton textiles

## **Program options**

Express Fast wash for lightly stained garments, maximum load: 4 kg

Prewash in 30°C for heavily stained garments

Temperature The temperature can be reduced in 10°C stages

Spin speed The spin speed can be reduced in steps of 100 rpm

Rinsing stop The laundry is held in the last rinse water

Antibac Kills harmful germs and mites and flushes out allergens

#### Change language



Tap the light bar next to the speech bubble. Select desired language.



© PODAB 2019-02-26 Wall instructions TM 8